


Editor Menu Structure

Enter Editor:

1. Click the "LEFT BUTTON-EDITOR" four or more times in rapid succession.
2. Hold the button down until "ENTERING EDITOR" is displayed in the LCD.

Exit Editor:

1. Go to the first level of the menu structure.
2. Move the stick left until "EXIT EDITOR" is displayed.
3. Click any MouseStick button.

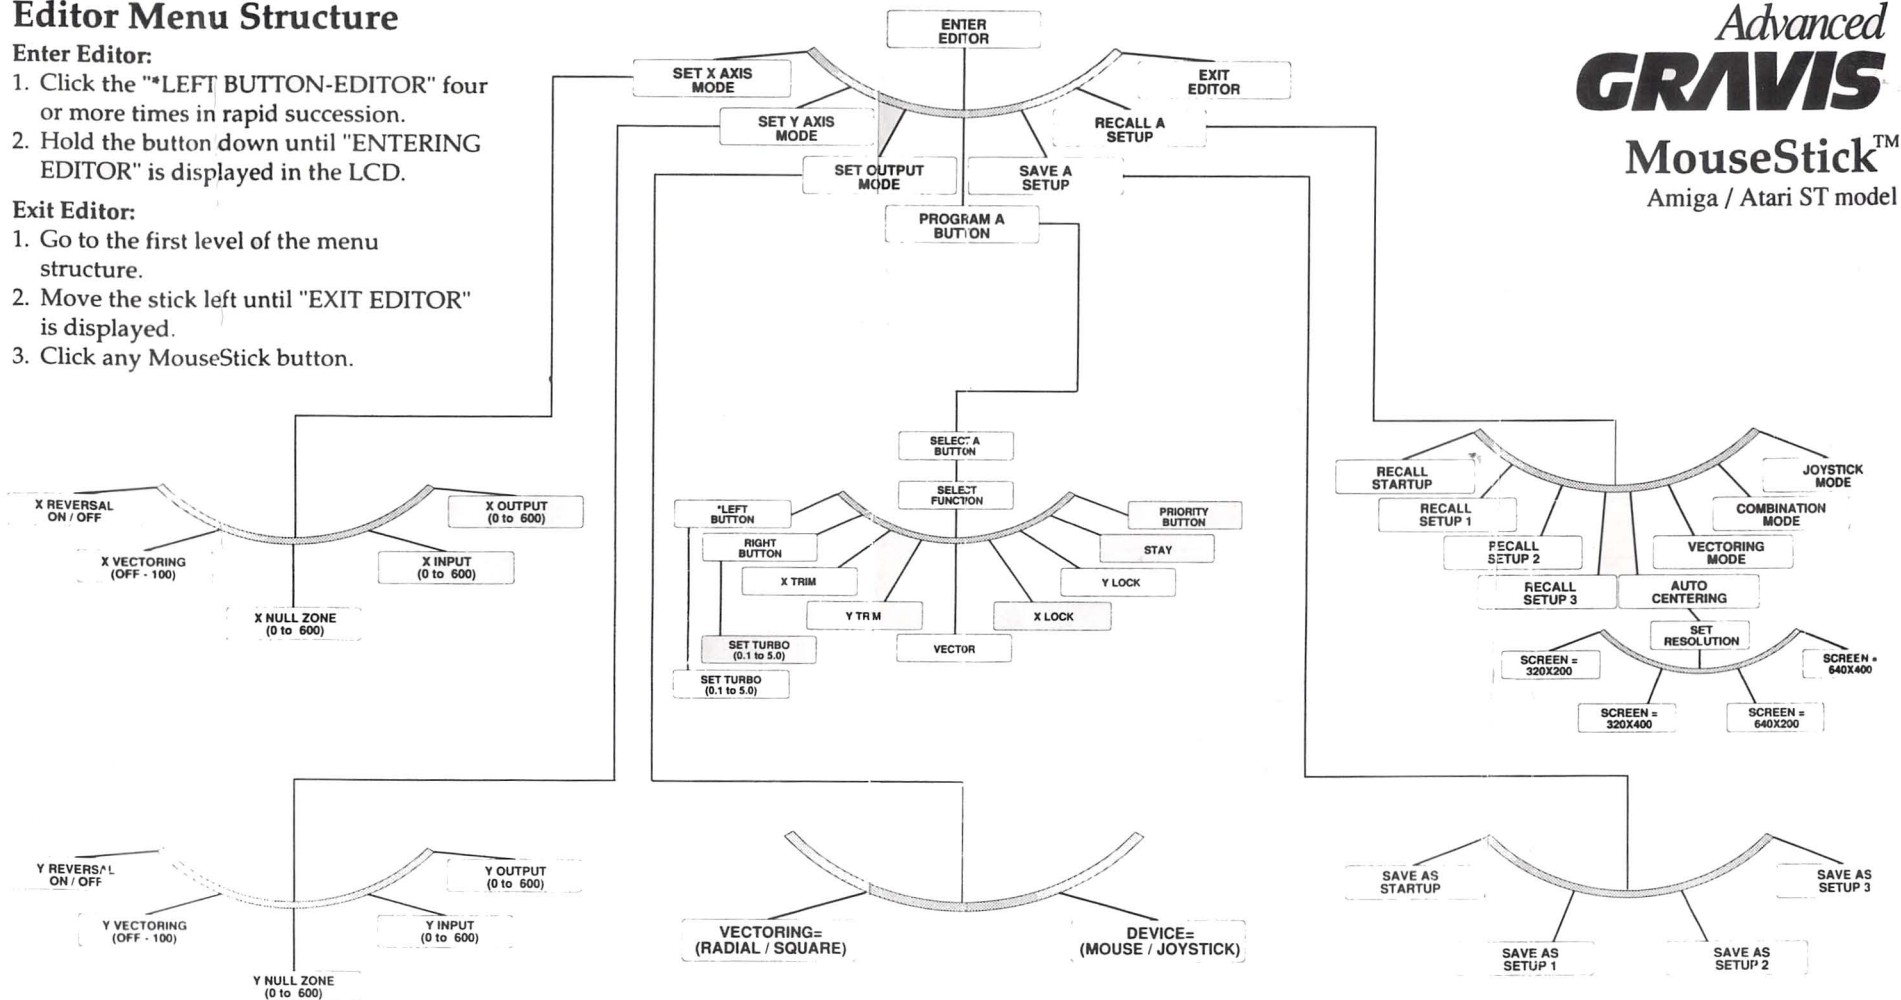

Advanced
GRAVIS
 MouseStick™
 Amiga / Atari ST model

RECORD OF SAVED MOUSESTICK SETUPS

STARTUP SET

SETUP 1

SETUP 2

SETUP 3
